CONCORD eye Q 3103

Quick Start Guide

• ENGLISH • FRANÇAIS • DEUTSCH • ESPAÑOL • ITALIANO

www.concord-camera.com

Camera Nomenclature

Front

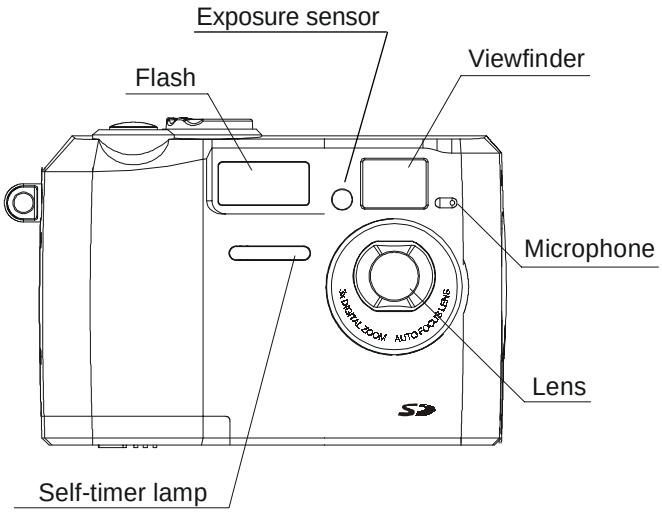

Back

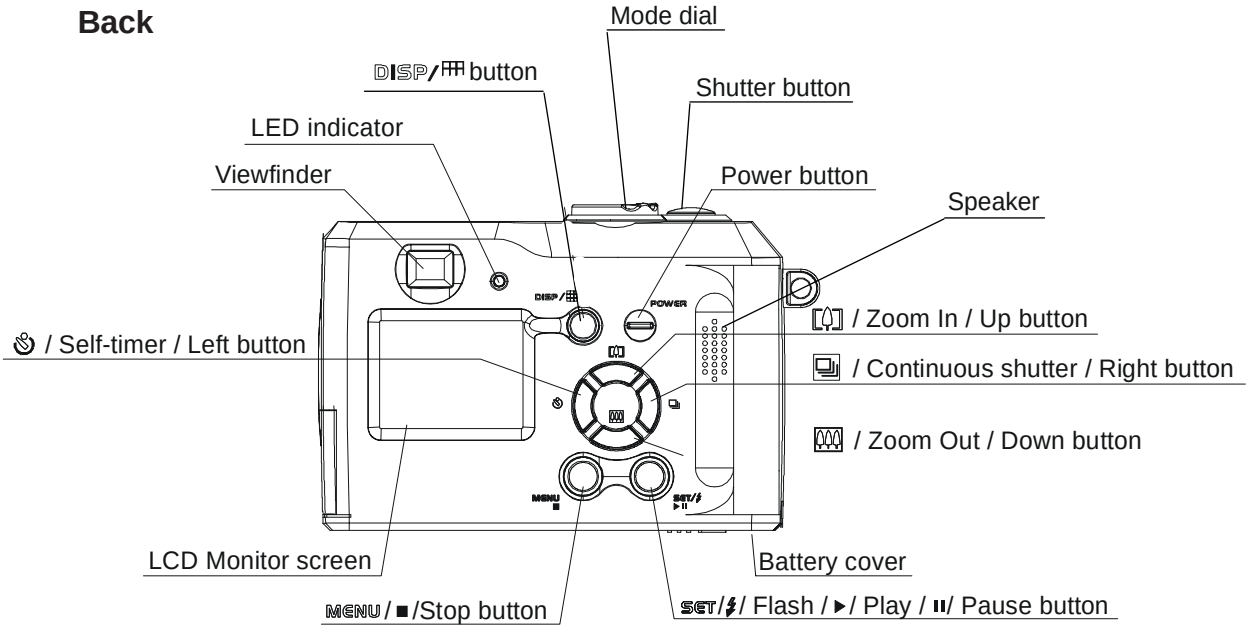

Battery Installation

1. Open the battery cover by pushing and sliding it to the side.

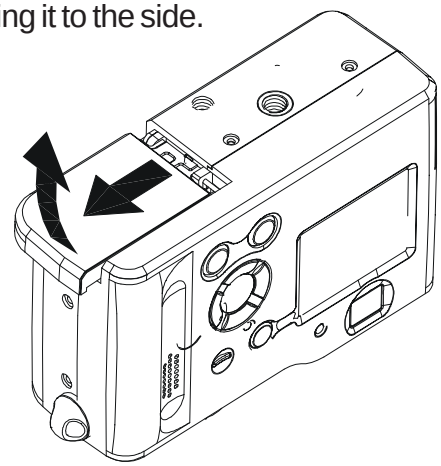

2. Check inscription on battery chamber for correct negative/positive installation.
3. Install 2-AA alkaline batteries.
4. Close the battery cover.

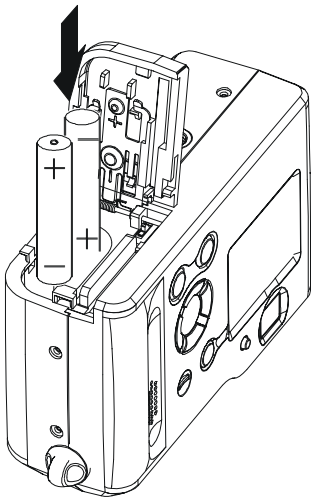

Camera Working Mode

You can select the camera's working mode by using the Mode dial located on the top of the camera. There are 4 working modes in this camera.

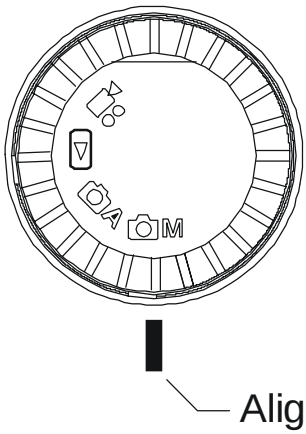

Auto Photo Mode (A)

In this mode, the camera will automatically set the exposure and white balance according to your shooting environment.

Manual Photo Mode (M)

You can manually set the exposure and white balance before shooting.

Playback Mode

1. Replay or delete images from the camera.
2. Download and display images to your computer.

Video Mode

1. Use this mode to record movies.
2. You can also manually set the exposure and white balance before recording the video.

Taking Pictures

There are two Modes you can choose from to take a picture. In the Auto Mode, just press the shutter button and let the camera judge the environmental conditions for you. In the Manual Mode, you can manually adjust the exposure and set the white balance based on different environmental conditions. Please refer to page 21 of the user's manual.

Taking a Picture

1. Turn the Mode dial to Auto (A) or Manual (M).
2. Press the POWER button (POWER) to power on the camera.
3. Press the Shutter button halfway and align the auto focus mark on the subject you want to take. When the focus is locked, the auto focus mark turns green.

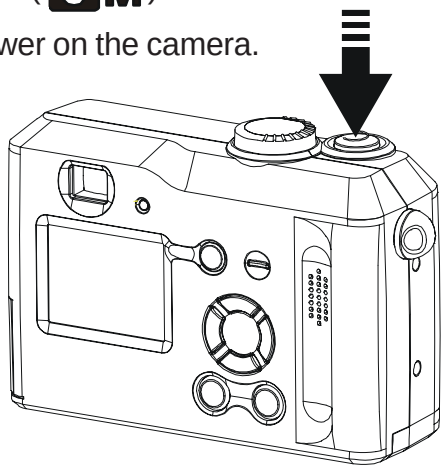

If the display indicators on LCD screen turn red, this means the camera's auto exposure and auto white balance function is not ready or the conditions are not ideal for optimal quality picture taking. If you take the picture despite the conditions, the picture may be over or under exposed.

4. Take a picture by pressing the shutter button further. When the camera beeps, the image has been captured and will be recorded on the card or in the internal memory.

* The camera will not emit a beeping sound if this function is disabled.

5. During recording to the memory card, the LED indicator will flash Green. Once the LED indicator stops flashing, the recording has finished.

Using the Digital Zoom

When the LCD screen is on in Auto or Manual Mode, you can zoom in on the subject before the image is taken.

1. Turn the Mode dial to Auto (A) or Manual (M).
2. Turn on the LCD screen and the Information display (if not, press DISP button).
3. Press the UP button ( ) to zoom in on the subject.
4. Press the Down button ( ) to zoom out.

Reviewing Your Pictures and Videos

Viewing Pictures

You can view pictures and images in Playback mode.

1. Turn the Mode dial to Playback (▶). The LCD screen displays the last recorded image.
2. Use the RIGHT/LEFT button ( ) to view different pictures.

NOTE: · To view video clips, press the PLAY button (SET/▶II).

· Press the STOP button (MENU/■) to stop the video.

· If you press STOP while the video is playing, the video will return to the first image.

Viewing Pictures in Thumbnail

You can view up to 9 images at a time by using the THUMBNAIL function (▦).

1. Turn the Mode dial to Playback mode (▶).
2. The LCD screen displays the last recorded image.
3. Press DISP/▦ button twice to enter thumbnail mode.

Deleting Pictures

You can delete a single or all images while in Playback mode (▶).

Deleting a Single Image

1. Turn the Mode dial to Playback mode(▶).
2. Press the MENU button. Use the UP/DOWN to toggle between the options.
3. Press the SET button to make your selection.
4. Use the UP/DOWN button to highlight the icon and return to the menu and not delete the image. Press SET to return to the “DELETE MENU”. Press the down button to highlight the delete icon ( ).
5. Press the SET button to confirm your selection.

Deleting All Unprotected Images

1. Turn the Mode dial to Playback mode(▶).
2. Press MENU button.
3. Press the UP/DOWN button to toggle between the options.
4. Press the SET button. Use the UP/DOWN buttons to toggle between CANCEL and YES.
5. Press the SET button to confirm your selection.

Downloading Images to a Computer

Installing the Driver & Software

Note: You do not need to install the drivers if you are running Windows,ME, 2000 or XP. Please go to the "Installing the Software" section.

Note to Mac users: You do not need to install drivers or software to transfer pictures. Please see "Downloading Images to a Computer" for instructions.

Installing the Driver

Installing Camera Drivers (Windows 98/98SE)

If your operating system is Windows 98/98SE:

1. Insert the CD into your PC CD-ROM drive. Make sure that your camera is not connected to the computer.
2. A red check mark appears on the left side of each installaiton choice. Remove all checks except the one for the camera driver by clicking on the checks next to each choice.

CAM-IN Suite III
Camera Driver & CAM-IN Suite III
Photo Studio - MGI PhotoSuite IV SE
Movie Studio - MGI VideoWave IV SE
Video Conferencing - Microsoft NetMeeting
Panorama tools - MGI PhotoVista 2.02
Install
Exit

3. Click on install.
4. Follow the on-screen instructions. After the installation has finished, reboot your computer. You are now ready to install the software.

NOTE:
If your system requires a manual installation: Click Run, type “(the CD-ROM drive):/install.exe”, then click OK.

Follow the directions that follow to install all the software.

Installing the Software (Windows Users)

You may choose to skip the software installation procedure if you already have photo editing software loaded on your computer or if you would like to transfer pictures without editing them.

Please refer to the Downloading Images section for instructions on transferring pictures to you computer.

If your operating system is Windows 98/98SE/2000/ME/XP:

1. Insert CD into your PC CD-ROM drive. Make sure that your camera is not connected to the computer.
2. Click on Photo Studio, Movie Studio, Video Conferencing and Panorama tools. A red check mark should appear in the circle next to each option. Camera Driver does not need to be checked.
3. Click on install.

CAM-IN Suite III
Camera Driver & CAM-IN Suite III
Photo Studio - MGI PhotoSuite IV SE
Movie Studio - MGI VideoWave IV SE
Video Conferencing - Microsoft NetMeeting
Panorama tools - MGI PhotoVista 2.02
Install
Exit

1. Click the MGI PhotoSuite 4 SE menu on autorun frame.

2. A Welcome window will be displayed. Click [Next>] to move to the next step.

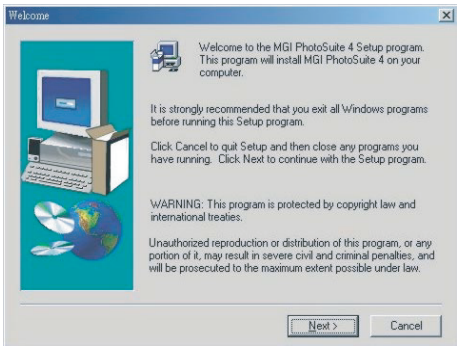
Welcome
Welcome to the MGI PhotoSuite 4 Setup program. This program will install MGI PhotoSuite 4 on your computer.
It is strongly recommended that you exit all Windows programs before running this Setup program.
Click Cancel to quit Setup and then close any programs you have running. Click Next to continue with the Setup program.
WARNING: This program is protected by copyright law and international treaties.
Unauthorized reproduction or distribution of this program, or any portion of it, may result in severe civil and criminal penalties, and will be prosecuted to the maximum extent possible under law.
Next >
Cancel

3. The Software License Agreement window will be displayed.
   If you agree to this, click [YES], the window will then move to the next step. If you disagree, click [NO] and the install program will be canceled.

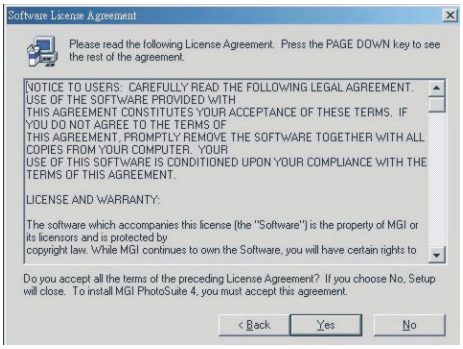
Software License Agreement
Please read the following License Agreement. Press the PAGE DOWN key to see the rest of the agreement.
NOTICE TO USERS: CAREFULLY READ THE FOLLOWING LEGAL AGREEMENT. USE OF THE SOFTWARE PROVIDED WITH THIS AGREEMENT CONSTITUTES YOUR ACCEPTANCE OF THESE TERMS. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY REMOVE THE SOFTWARE TOGETHER WITH ALL COPIES FROM YOUR COMPUTER. YOUR USE OF THIS SOFTWARE IS CONDITIONED UPON YOUR COMPLIANCE WITH THE TERMS OF THIS AGREEMENT.
LICENSE AND WARRANTY:
The software which accompanies this license (the "Software") is the property of MGI or its licensors and is protected by copyright law. While MGI continues to own the Software, you will have certain rights to
Do you accept all the terms of the preceding License Agreement? If you choose No, Setup will close. To install MGI PhotoSuite 4, you must accept this agreement.
< Back
Yes
No

4. Click Next to continue the installation.

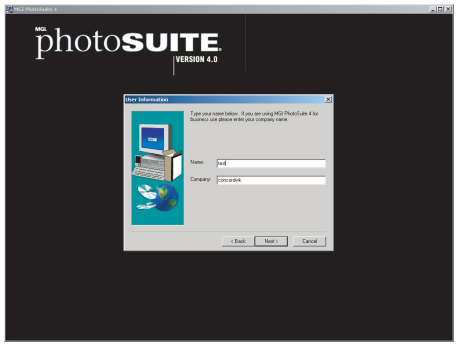

5. Select Destination Location. Click on Next

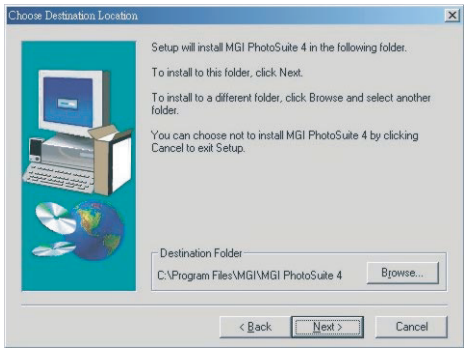
Choose Destination Location
Setup will install MGI PhotoSuite 4 in the following folder.
To install to this folder, click Next.
To install to a different folder, click Browse and select another folder.
You can choose not to install MGI PhotoSuite 4 by clicking Cancel to exit Setup.
Destination Folder
C:\Program Files\MGI\MGI PhotoSuite 4
Browse...
< Back
Next >
Cancel

6. We suggest creating a shortcut on your desktop by selecting this option. Click Next to continue the installation.

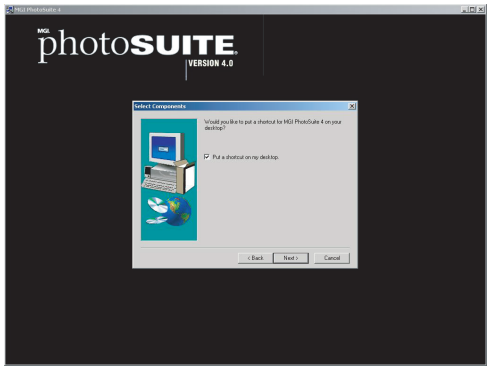
photoSUITE
VERSION 4.0
Select Components
Would you like to put a shortcut for MGI PhotoSuite 4 on your desktop?
Put a shortcut on my desktop.
< Back
Next >
Cancel

7. Click Next to continue the installation.

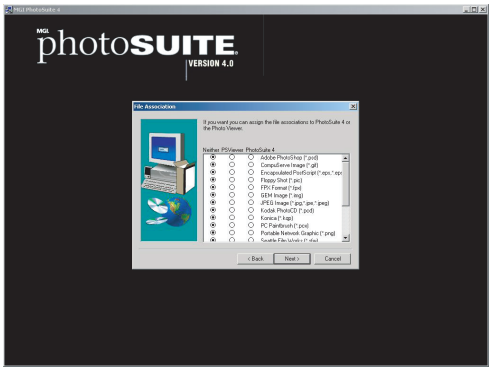

8. Start Copying Files window will displayed.
Click [Next>] to start installation.

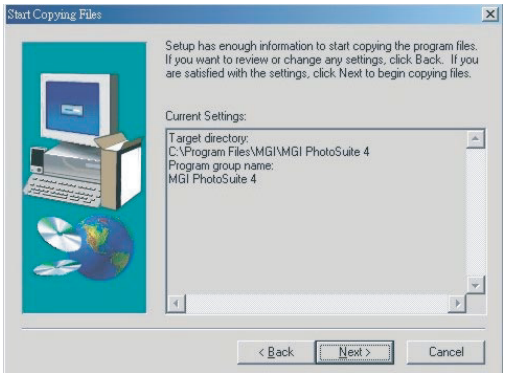
Start Copying Files
Setup has enough information to start copying the program files. If you want to review or change any settings, click Back. If you are satisfied with the settings, click Next to begin copying files.
Current Settings:
Target directory:
C:\Program Files\MGI\MGI PhotoSuite 4
Program group name:
MGI PhotoSuite 4
< Back
Next >
Cancel

9. Wait while the software is installed.

10. Click Finish to complete the the setup.

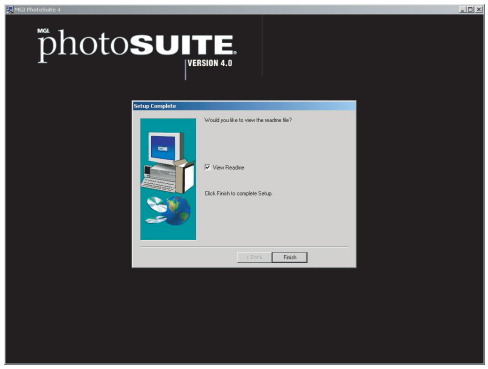

11. Click Continue.

12. Click Cancel if you would like to complete the registration at a later date. If you would like to register now, complete the registration form and click Register.

13. Select "Yes, I will restart my computer".

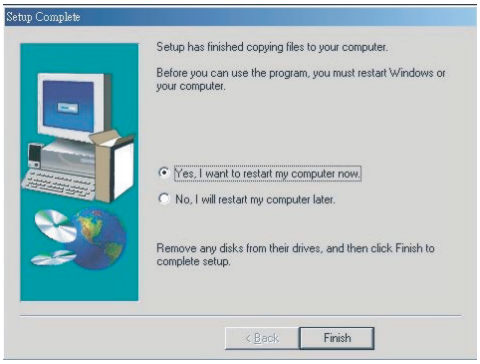
Setup Complete
Setup has finished copying files to your computer.
Before you can use the program, you must restart Windows or your computer.
Yes, I want to restart my computer now.
No, I will restart my computer later.
Remove any disks from their drives, and then click Finish to complete setup.
< Back
Finish

MGI Video Wave will install next. Follow the on screen instructions. After the installation has finished, choose YES when asked to restart.

Photo Vista will install next. Follow the on screen instructions. After the installation has finished, choose YES when asked to restart.

NOTE:
If your system requires a manual installation: Click Run, type “(the CD-ROM drive):/install.exe”, then click OK.

Transfering Pictures(Windows Users)

1. If your operating system is Windows 98/98SE, make sure that you install the USB driver and imaging software that comes on the bundled CD-ROM first.
   Please see above and refer to Page 44 and 45 of the user's manual.
   If your operating system is Windows ME/2000 or XP installing the driver is unnecessary, however; please remember to install the software.
2. Connect the supplied USB cable to the computer's USB port.
3. Turn on your camera, and your computer will detect the camera and then automatically complete the camera installation.
4. A " Removable Disk" will be displayed under "My Computer".
5. Double-click the "Removable Disk" and you will see a "DCIM" folder.
6. All the images stored on your camera memory storage are transferred to the "DCIM" folder.

Transferring Images to a Mac

1. Set the camera to review mode.
2. Connect the supplied USB cable to the camera and the computer's USB port.
   Please refer to your computer manual for information regarding the USB port location.
3. Turn on the camera.
4. The INTERNAL icon will appear on your desktop and the iPhoto screen will pop up.
   You may use either iPhoto or the INTERNAL icon to acquire images.
   Using iPhoto: Click on Import to transfer pictures.
   Using the INTERNAL icon:
   1. Click on the INTERNAL icon.
   2. The DCIM folder will appear. All the images stored in the camera are transferred to this folder. Open the folder and double click to view the images.

Technical Support Hot Line:

Toll Free In the USA & Canada

1-866-522-6372

Toll Free In Europe

UK: 0800-169-6482

BELGIUM: 0800-787-57

FRANCE: 0800-917-599

GERMANY: 0800-1800-563

SPAIN: 900-973-195

ITALY: 800-781-883

All Other Countries - Toll

31-53-482-9779